


尺寸：90X130MM  
材质：80g书写纸+双面印刷



Detail list

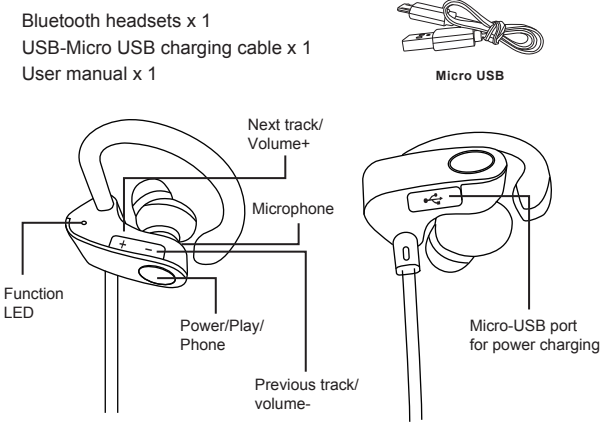

Using the Rumba

Thanks you for purchasing the Rumba sport wireless earbuds.  
This unit is designed to provide years of trouble-free audio performance.  
Please read these instructions carefully for proper operation and save for future reference.

Operation

**Connecting with Bluetooth**

To play audio from a Bluetooth device, you need to pair the device with the Headset. You can pair up to eight devices.

1. On your Bluetooth device, switch on Bluetooth and scan for devices in its Bluetooth menu.
2. Hold 3 seconds the Power/Play/Phone button to power on the headset. You will hear the voice "Power on", "Pairing". Meanwhile the function LED will turn flash blue/red.
3. When " RUMBA " appears on the device list of your Bluetooth device, select it to initiate pairing.The function LED turn slow flash blue after pairing is established.

Note: If pairing fails, switch the headset off and then back on so that the function LED flashes blue color again.

Using the headset

**Language Mode**  
Press "+" & "-" buttons together to switch language mode between Chinese and English.

**Answering a Call**  
When a call is coming, the ring tone will be heard by headset, press "Power/Play/Phone" button once to accept the call or answer the call via your mobile phone.

**Rejecting a Call**  
Long press the "Power/Play/Phone" button to reject the incoming call.

**Ending a Call**  
While speaking, press "Power/Play/Phone" button once to end the call or hang up on your mobile phone.

**Cancel Dialing**  
Press the "Power/Play/Phone" button once when dialing to cancel the dialing.

**Last Call Redialing**  
In stand-by mode, double press the "Power/Play/Phone" button to redial the last call.

Charging the Rumba

The Rumba is powered by a rechargeable battery inside the headset When the function LED turn flashes red color or if the headset turn power off automatically, it's time to recharge the battery.Connect the Micro USB plug to the headset and larger USB plug to a powered USB port, such as that a computer, or the optional AC adapter. The light on the headset will turn red whilst charging and the red LED will be off when fully charged.

- Note:
1. You can not continue to listen the headset whilst it is charging.
  2. If the battery level is too low, the headset will turn off automatically.

|                                       |                                      |
|---------------------------------------|--------------------------------------|
| <b>SPECIFICATION</b>                  |                                      |
| Product Name: Sports wireless earbuds | Charging time: Approximately 2 hours |
| Product type: Rumba                   | Sensitivity(SPL): 88±3dB             |
| Workarea: 10M                         | Impedance: 16~21Ω±10%                |
| Standby time: 400 hours               | Rated Input Power: 10mW              |
| Calling time: 3-4 hours               | Distortion: ≤1%                      |

- ATTENTIONS**
1. Try to avoid prolonged and continuous uses at high volume which can damage your hearing.
  2. Do not wear the earphones while driving or cycling driving in case of affecting
  3. Avoid placing the earphones in prolonged sun exposure, high temperature, dusty and humid environments which will damage the wires allot and affect the normal use.
  4. Clean your unit with a soft cloth moistened only with mild soap and water.
  5. Stronger cleaning agents, such as benzene, thinner or similar materials can damage the surface of the unit.

- RECHARGEABLE LITHIUM-ION BATTERY**
- This device uses an internal rechargeable lithium-ion battery that should last the lifetime of the device. if you suspect your battery may be dead, try charging it several times. If the battery does not recharge, please contact us for repair information. Please do NOT attempt to change the battery yourself. If the battery has died and you do not want us to replace your battery, you should follow the disposal instructions below.
1. Never dispose of used batteries/electronics with ordinary solid wastes, since they contain toxic substances.
  2. Always dispose of used batteries/electronics in accordance with the prevailing community regulations that apply to the disposal of batteries/electronics. If there are no local regulations concerning battery/electronics disposal, please dispose of the device in a waste bin for electronic devices.
  3. Many electronics retailers now recycle batteries and other electronic components at no charge. Check to see which ones in your area do so.

**Caution: The battery used in this device may present a risk of fire, explosion or chemical burn if mistreated**

- 1.Unit shall not be exposed to excessive heat such as sunshine, fire, or the like.
2. Do not use or charge the battery if it appears to be leaking, discolored, deformed, or in any way abnormal.
3. Do not leave your battery discharged or unused for extended periodsof time.

**WARRANTY**

This product is covered under warranty for a period of one year from the date of sale limited to normal use and maintenance of the machine parts, materials and functions. Problems and failures verified upon further identification, will be provided free repair and replacement parts.

**FCC/BLUETOOTH STATEMENT**

Ⓢ This device complies with part 15 of FCC rules. Operation is subject to the following two conditions (1) This device may not cause harmful interference, and (2) this device must accept any interference recived,inclunding interference that may cause undesired operation.

**FCC ID : 2ACP4BT650 Model: Rumba**

• The bluetooth word mark and logos are registered trademarks owned by Bluetooth SIG,Inc.

CE FC